


Commissioning tools.


K4

Parameterization and commissioning

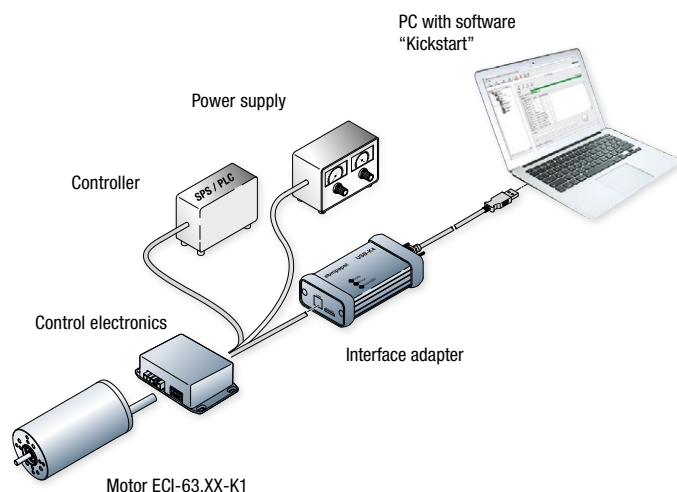

Automatic operation

Automatic operation with stored parameters and integrated control

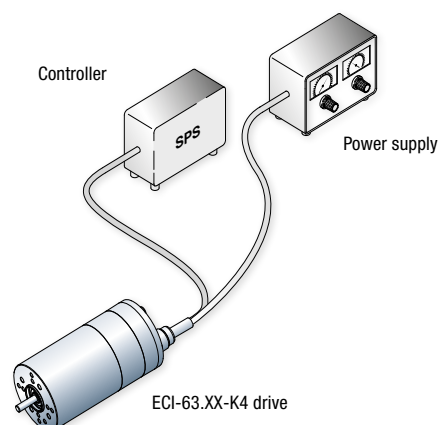

Commissioning setup

The RS485 interface serves as an interface for parameterization and diagnosis. It can be operated using the freely available “Kickstart” PC software. This requires a PC and the ebm-papst USB-CAN-RS485 adapter. Load your detailed operating manual and the PC software “Kickstart” under www.ebmpapst.com.



Interface adapter for
“Kickstart” PC software

USB-CAN-RS485 adapter

Order no.

914 0000 400

Functional description of the LED displays

LED name	Color	Function assignment
Data	red	No assignment.
	green	Active data transfer via the USB-CAN-RS485 adapter.
Error	red	No response following request to K4. Receipt of a faulty data package.
	green	Received data is OK.
microSD	red	No assignment.
	green	Access to the memory card.