

Max. 1030 m³/h
S-Panther

DC axial fans

Ø 172 x 51 mm



- Material:** Housing: Die-cast aluminum
Impeller: GRP¹⁾ (PA)
- Direction of air flow:** Exhaust over struts
- Direction of rotation:** Counterclockwise, looking towards rotor
- Connection:** AWG 18, 20 UL 1007, TR 64, speed and alarm signals: AWG 22, UL 1007, TR 64
- Highlights:** Highly efficient and smoothly operating 3-phase fan drive
Housing with grounding lug for screw M4 x 8 (Torx)
- Weight:** 850 g
- Possible special versions:** (See chapter DC fans - specials)
 - Speed signal
 - Go / NoGo alarm
 - Alarm with speed limit
 - External temperature sensor
 - Internal temperature sensor
 - PWM control input (standard)
 - Analog control input
 - Multi-option control input
 - Moisture protection
 - Salt spray protection
 - Degree of protection: IP 54

1) Fiberglass-reinforced plastic


Series 6300 NTD

Nominal data

	Air flow	Air flow	Nominal voltage	Voltage range	Sound pressure level	Sound power level	Sinter sleeve bearings Ball bearings	Power consumption*	Nominal speed	Temperature range	Service life L ₁₀ (40 °C) ebm-papst standard	Service life L ₁₀ (T _{max}) ebm-papst standard	Life expectancy L ₁₀ IPC (40 °C) see page 17	Curve
Type	m ³ /h	cfm	VDC	VDC	dB(A)	Bel(A)	■ / ■	Watts	rpm ⁻¹	°C	Hours	Hours	Hours	
6314 N/2 TDHHP	970	571	24	16...36	-	8.3	■	135	7200	-20...+70	62,500 / 32,500	105,000	①	
6318 N/2 TDH3P	1030	606	48	36...72	83	8.4	■	152	7500	-20...+70	60,000 / 30,000	102,500	②	

Subject to change

Speed control range from 1000 rpm⁻¹ up to maximum nominal speed. Standstill at 0% PWM, maximum speed if control cable is interrupted.
* Power consumption at free air flow. These values can be significantly higher in the operating point.

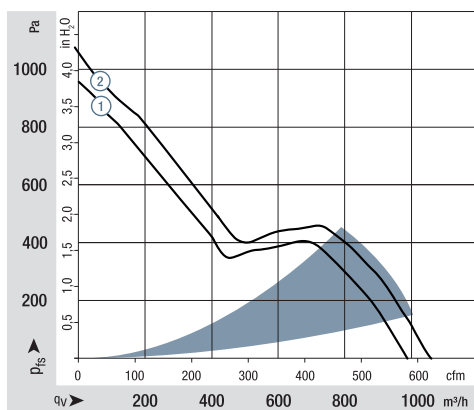

Air performance measured according to: ISO 5801.
Installation category A, without contact protection.
Noise: Total sound power level L_{WA} ISO 103002 measured on a hemisphere with a radius of 2 m.
Sound pressure level L_{PA} measured at 1 m distance from fan axis.
The values given are applicable only under the specified measuring conditions and may differ depending on the installation conditions.
In the event of deviation from the standard configuration, the parameters must be checked after installation!
For detailed information see <http://www.ebmpapst.com/general conditions>

